

# Guardian

EMERGENCY EYEWASH & SHOWER TECHNOLOGY



## Safety Solutions Catalog

**Emergency equipment that you need.**

Eyewashes | Eye/Face Washes | Eyewash/Drench Hose Units | Emergency Showers | Safety Stations | and More!

Guardian Equipment  
1140 N North Branch St  
Chicago, IL 60642



6 fE0Äf. B Ø > 6 . p | TMS X TM EE TM / f Ø > E fS /  
Ø Ø Ø | TMS X TM | . E / TM



# The Guardian Advantage

Over the past 40 years, Guardian has worked tirelessly to establish itself as the industry's leading manufacturer of emergency eyewash and shower technology. We have developed a great sense of responsibility to our craft, our people and most importantly our customers. Our LEED gold-certified facility has set the industry standard of excellence, and *The Guardian Advantage* has become the backbone of our identity, and the driving force behind providing the ultimate customer experience.



## 100% Factory Assembled and Tested

Guardian eyewashes are 100% assembled, inspected and water-tested before shipment, which means you receive the most reliable emergency equipment each time, every time.



## Made in the USA

The finest emergency equipment in the world is engineered and meticulously crafted right here in the US. We're proud of our product quality, and even more proud to tell you we manufacture all our equipment in Chicago, IL.



## Two-Year Warranty

All of our products are supported by an industry-leading two-year warranty. When you order emergency equipment from Guardian, you're not just receiving the world's most reliable safety equipment, you're receiving product from the industry leader who has the confidence to back it up.

Visit [gesafety.com](https://www.gesafety.com) to view our complete product line. We look forward to sharing *The Guardian Advantage* with you.



# Guardian

## Eyewashes

### Quickly rinse contaminants from eyes.

- GS-Plus™ spray heads deliver water for effective flushing.
- 11-1/2" diameter ABS plastic or stainless steel (SS) bowl.
- Wall mount with included bracket or floor mount with included pedestal and floor flange.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Eyewash, Wall Mounted, Plastic Bowl	G1814P
Eyewash, Wall Mounted, SS Bowl	G1814
Eyewash, Wall Mounted, SS Bowl with Cover	G1814BC
Eyewash, Pedestal Mounted, Plastic Bowl	G1825P
Eyewash, Pedestal Mounted, SS Bowl	G1825
Eyewash, Pedestal Mounted, SS Bowl with Cover	G1825BC
Eyewash, Wall Mounted, All-SS	G1891



**G1814P**  
Eyewash, Wall Mounted, Plastic Bowl



**G1814BC**  
Eyewash, Wall Mounted, SS Bowl with Cover



**G1825**  
Eyewash, Pedestal Mounted, SS Bowl

## Eye/Face Washes

### Quickly rinse contaminants from eyes and face.

- Extra large FS-Plus™ spray heads deliver more water in a larger spray pattern for facial coverage.
- 11-1/2" diameter ABS plastic or stainless steel (SS) bowl.
- Wall mount with included bracket or floor mount with included pedestal and floor flange.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Eye/Face Wash, Wall Mounted, Plastic Bowl	G1750P
Eye/Face Wash, Wall Mounted, SS Bowl	G1750
Eye/Face Wash, Wall Mounted, SS Bowl with Cover	G1750BC
Eye/Face Wash, Pedestal Mounted, Plastic Bowl	G1760P
Eye/Face Wash, Pedestal Mounted, SS Bowl	G1760
Eye/Face Wash, Pedestal Mounted, SS Bowl with Cover	G1760BC



**G1750**  
Eye/Face Wash, Wall Mounted, SS Bowl



**G1750BC**  
Eye/Face Wash, Wall Mounted, SS Bowl with Cover



**G1760**  
Eye/Face Wash, Pedestal Mounted, SS Bowl

## Swing-Away Eyewashes

### Quickly rinse contaminants from eyes in lab environments.

- Units swing over sink to operational position for activation. Waste water deposits down sink drain.
- AutoFlow™ units activate water flow immediately as spray heads swing to operational position. Flag handle units must be depressed to activate water flow.
- G1849 mounts behind sink next to faucet and swings down to operational position.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Eyewash, Deck Mounted, AutoFlow™, Right Hand	G1805
Eyewash, Deck Mounted, AutoFlow™, Left Hand	G1805LH
Eyewash, Deck Mounted, Flag Handle, Right Hand	G1806
Eyewash, Deck Mounted, Flag Handle, Left Hand	G1806LH
Eyewash, Deck Mounted, AutoFlow™, Swing-Down	G1849

**G1805**  
Eyewash, Deck Mounted, AutoFlow™



**G1806**  
Eyewash, Deck Mounted, Flag Handle



## Eyewash/Drench Hose and Drench Hose Units

### Rinse contaminants from eyes, face or body.

- Dual purpose units meet ANSI Z358.1 standard as eyewash and drench hose. Leave units in mount for hands-free fixed eyewash or remove to rinse any part of a user's eyes, face or body.
- G5025 and G5020 drench hose units only supplement ANSI compliant eyewash and shower equipment.
- 8' reinforced PVC hose included. G5014 includes 12' nylon hose for extra reach.
- Deck mount on countertop with included flange or wall mount with included bracket.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

EYEWASH/DRENCH HOSE UNIT DESCRIPTION	MODEL
Eyewash/Drench Hose Dual Purpose Unit, Deck Mounted	G5022
Eyewash/Drench Hose Dual Purpose Unit, Wall Mounted	G5026
Eyewash/Drench Hose Dual Purpose Unit, Wall Mounted, Flag Handle, 12' Hose	G5014

DRENCH HOSE UNIT DESCRIPTION	MODEL
Drench Hose Unit, Deck Mounted	G5020
Drench Hose Unit, Wall Mounted	G5025

**G5022**  
Eyewash/Drench Hose Dual Purpose Unit, Deck Mounted



**G5020**  
Drench Hose Unit, Deck Mounted



**G5026**  
Eyewash/Drench Hose Dual Purpose Unit, Wall Mounted





## Emergency Showers

**Quickly wash away contaminants with full body flush.**

- 10" diameter ABS plastic or stainless steel (SS) shower head.
- Galvanized pipe and fittings. All stainless steel (All-SS) for corrosive environments.
- Accommodate common water supply pipe locations with horizontal or vertical mounted units.
- ANSI-compliant sign included.

DESCRIPTION	MODEL
Emergency Shower, Vertically Mounted	G1635
Emergency Shower, Vertically Mounted, SS Head	G1635SSH
Emergency Shower, Horizontally Mounted	G1643
Emergency Shower, Horizontally Mounted, SS Head	G1643SSH
Emergency Shower, Horizontally Mounted, All-SS	G1691



## Safety Stations

**Combination eye or eye/face wash and shower station quickly washes contaminants from eyes, face and body.**

- 10" diameter ABS plastic or stainless steel (All-SS) shower head.
- 11-1/2" diameter ABS plastic eye or eye/face wash bowl. Stainless steel (SS) bowl for high traffic environments. Stainless steel bowl with cover (SS Bowl with Cover) for added spray head protection.
- Galvanized pipe and fittings. All stainless steel (All-SS) models for corrosive and high traffic environments.
- ANSI-compliant sign included.
- Eye and eye/face wash assemblies are water tested prior to shipment.

DESCRIPTION	MODEL
Safety Station with Eyewash, Plastic Bowl	G1902P
Safety Station with Eyewash, SS Bowl	G1902
Safety Station with Eyewash, SS Bowl with Cover	G1902BC
Safety Station with Eye/Face Wash, Plastic Bowl	G1950P
Safety Station with Eye/Face Wash, SS Bowl	G1950
Safety Station with Eye/Face Wash, SS Bowl with Cover	G1950BC
Safety Station with Eyewash, All-SS	G1991
Safety Station with Eye/Face Wash, All-SS	G1996
Alarm for Safety Station	AP275-200



## Portable Eyewashes

Quickly wash contaminants from eyes in low traffic areas, or where continuous supply of potable water is unavailable for plumbed units.

- Fill tanks with potable water and included G1540BA bacteriostatic additive. Replace water and additive every six months to ensure bacteria-free eyewash.
- G1562 includes eyewash and drench hose. Stainless steel pressurized tank is ideal for floor placement near any hazard or can be mounted on stainless steel dolly.
- G1540 gravity fed polyethylene unit includes eyewash only. Unit is wall mountable with included steel bracket.
- G1562HTR and G1540HTR heated units are ideal for cold weather environments down to -20°F.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Portable Eyewash/Drench Hose Unit, 15 gallon	G1562
Portable Eyewash/Drench Hose Unit, 15 gallon with Heater and Insulation Jacket	G1562HTR
Dolly for Portable Eyewash/Drench Hose Unit	G1562DLY
Hand Cart for Portable Eyewash/Drench Hose Unit	G1562HC
Portable Eyewash, Gravity-Fed, 16 gallon	G1540
Portable Eyewash, Gravity-Fed, 16 gallon with Heater and Insulation Jacket	G1540HTR
Bacteriostatic Additive, Replacement (Case of 4)	G1540BA-R



**G1562**  
Portable  
Eyewash/ Drench  
Hose Unit



**G1540**  
Portable Eyewash,  
Gravity-Fed



**G1562DLY**  
Dolly for Portable  
Eyewash/Drench  
Hose Unit



**G1562HTR**  
Portable Eyewash/  
Drench Hose Unit  
with Heater and  
Insulation Jacket

## Faucet Mounted Eyewashes

Add-on eyewash allows faucet to be used as faucet or eyewash.

- Pull knob activates eyewash. Unit operates until knob is pushed back to original position.
- EyeSafe™ spray head outlets mount 3" apart to fit most faucets.
- EyeSafe-X™ large profile spray head outlets mount 5" apart to fit gooseneck faucets.
- G1200 and G1201 offer single motion activation with Faucet Control Valve. Faucet remains 'on' at preset temperature and flow of water is controlled by valve. Pull knob activates eyewash at any time regardless of control valve position.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Faucet Mounted Eyewash, EyeSafe™ 3" spray head	G1100
Faucet Mounted Eyewash, EyeSafe-X™ 5" spray head	G1101
Faucet Mounted Eyewash, EyeSafe™ 3" spray head with Faucet Control Valve	G1200
Faucet Mounted Eyewash, EyeSafe-X™ 5" spray head with Faucet Control Valve	G1201

**G1100**  
Faucet Mounted  
Eyewash, EyeSafe™  
3" spray head



**G1201**  
Faucet Mounted  
Eyewash, EyeSafe-X™  
5" spray head with  
Faucet Control Valve



## Barrier-Free Units

### ADA-compliant eye/face wash and shower equipment complies with requirements for wheelchair access.

- Eye/face wash units and safety stations include WideArea™ 4-way spray heads for maximum facial coverage.
- Showers and safety stations include extra long stainless steel pull rod for increased accessibility.
- ANSI-compliant sign included.
- Valve and spray head assemblies are fully water tested prior to shipment.

DESCRIPTION	MODEL
Emergency Shower, Barrier-Free	GBF1643
Eye/Face Wash, Barrier-Free	GBF1724
Safety Station, Barrier-Free	GBF1909
Safety Station, Barrier-Free, All-SS	GBF1994
Alarm for Safety Station	AP275-200




**GBF1724**  
Eye/Face Wash,  
Barrier-Free



**GBF1909**  
Safety Station,  
Barrier-Free



**GBF1643**  
Emergency Shower,  
Barrier-Free

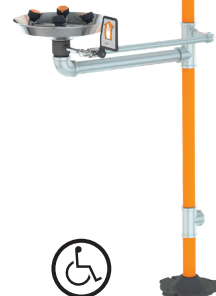

## Recessed Laboratory Units

### Emergency eye/face wash and shower safety stations save space by recessing into wall behind stainless steel drain pan.

- Pulling 'panic bar' handle opens drain pan to horizontal position to expose and activate eye/face wash spray heads.
- Drain pan collects waste water during use and returns into cabinet for drainage.
- GBF2152 offers cost effective installation with drainage out the front of the unit.
- Shower activates by pulling 'panic bar' handle located next to eye/face wash drain pan.
- Fits into standard 3-5/8" deep walls.
- ANSI-compliant sign included.
- Units are assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Recessed Safety Station with Drain Pan	GBF2150
Recessed Safety Station with Drain Pan, Daylight Drain	GBF2152
Modesty Curtain for Recessed Laboratory Units	AP250-065
Alarm for Recessed Laboratory Units	AP280-230



Recessed Safety Station with  
Drain Pan. Shown with Alarm.  
**GBF2150, AP280-230**



## Tempering Valves

**Blend hot and cold water to deliver tepid water to emergency equipment.**

- Internal thermostat automatically blends incoming water temperatures to 85°F.
- Certified to ASSE 1071.
- Certified to meet low-lead requirements.
- Built-in fail-safe feature allows delivery of cold water to emergency equipment during hot water supply malfunction. During cold water supply malfunction, valve closes to prevent scalding and will not deliver water.
- Mounts to wall or panel with included bracket.
- Assembled and water tested prior to shipment.

DESCRIPTION	MODEL
Tempering Valve for Eyewash, 6 Gal. Capacity	G3600LF
Tempering Valve for Safety Station, 44 Gal. Capacity	G3800LF
Tempering Valve for Multi-Unit Use, 81 Gal. Capacity	G3900LF



**G3600LF**  
Tempering Valve  
for Eyewash



**G3800LF**  
Tempering Valve  
for Safety Station



## Freeze-Resistant Units


**Electric heat-traced safety stations prevent freezing in extreme cold weather conditions.**

- For use in environments down to -40°F.
- Heat-tracing cable wraps around internal pipe and activates when pipe temperature falls below 75°F to maintain tepid water within unit.
- Galvanized steel piping with UV-resistant orange ABS plastic jacket and polyethylene foam insulation.
- Requires 120 VAC single phase power supply.
- ANSI-compliant sign included.
- Unit is fully wired and factory tested prior to shipment. Ships fully assembled and crated.

DESCRIPTION	MODEL
Heated Safety Station with Eyewash, Top Inlet	GFR3100
Heated Safety Station with Eyewash, Bottom Inlet	GFR3110



**GFR3100**  
Heated Safety  
Station with  
Eyewash,  
Top Inlet

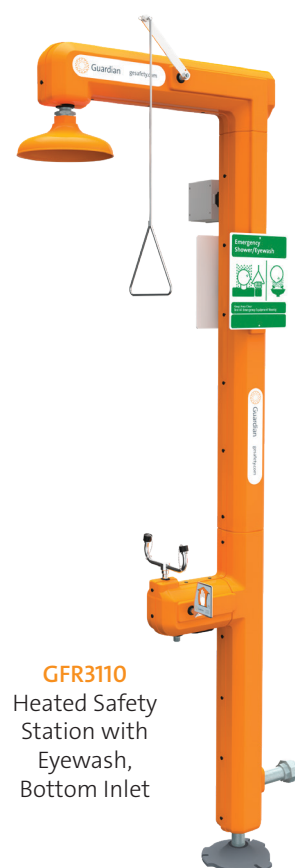

**GFR3110**  
Heated Safety  
Station with  
Eyewash,  
Bottom Inlet

L O N G O

// ASSOCIATES INC.