


UTILITY SHELVING

Utility shelving units are available in heights of 42" and 82". 42" high units are provided with 3/4" black plastic laminate tops. Standard shelves are 3/4" hardwood plywood. 82" high units provided with four adjustable shelves and center shelf fixed. 42" high units provided with two adjustable shelves.

- 1" Heavy-duty hardwood plywood shelves may be specified at an additional cost.
- 1" Black corrosion resistant phenolic resin shelves may be specified at an additional cost.
- Raised lip shelves may be specified at an additional cost.
- All dimensions are nominal.

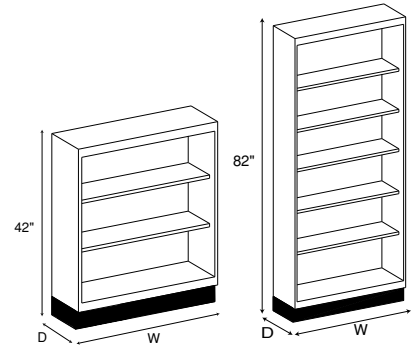

Two Shelf Units



12" DEEP


B184212-000 - 18"W
B244212-000 - 24"W

16" DEEP

B184216-000 - 18"W
B244216-000 - 24"W

22" DEEP

B184222-000 - 18"W
B244222-000 - 24"W



B304212-000 - 30"W
B354212-000 - 35"W

B304216-000 - 30"W
B354216-000 - 35"W


B304222-000 - 30"W
B354222-000 - 35"W

Five Shelf Units



12" DEEP

T188212-000 - 18"W
T248212-000 - 24"W



T308212-000 - 30"W
T358212-000 - 35"W

High Density Shelving

72460 - Single Face 30"Width X 12"Depth, Fixed

72470 - Single Face 35"Width X 12"Depth, Fixed

72465 - Double Face 30"Width X 24"Depth, Movable

72475 - Double Face 35"Width X 24"Depth, Movable


72480 - Double Face 30"Width X 24"Depth, Fixed

72490 - Double Face 35"Width X 24"Depth, Fixed

Sheldon's High Density Movable Shelving provides efficient storage for supplies and bulk items in the laboratory to maximize use of floor space. The shelving sections, mounted on a carriage system, roll-on (3) surface mounted metal tracks, eliminating the need to trench into the floor or build a platform to

gain access over the track.

The track and carriage system meet ADA Guidelines for Wheelchair Accessibility and incorporate a built-in, anti-tilt device meeting California Seismic codes.

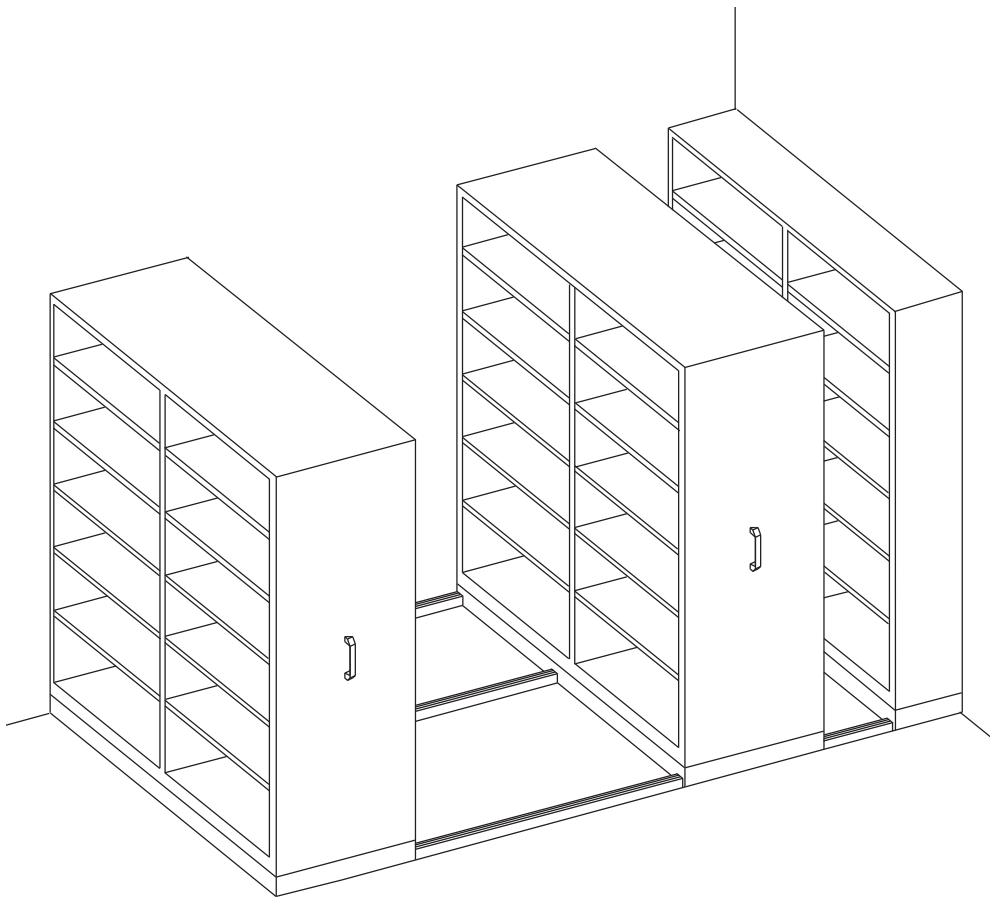

- Features

- Assembly height, including track & carriage, is approximately 81".
- Each unit provided with (5) shelves.
- Shelves adjustable on 1 1/4" centers using steel shelf pins.
- Shelves are 3/4" thick with 1/2" lip on front edge with standard finish.
- 3/4" thick Phenolic Resin shelves with 1/2" lip may be specified at an additional cost.